

SPECIFICATIONS

FEATURE

- The ultra slim LED downlights/surface mini panel comes with separate steel encased LED driver with watertight seal
- 1" Thin: Fits in Tight Ceiling Space.
- Snap-in mounting springs and easy wiring access for fast & easy Installation: Save labor cost.
- Junction Box Included: No additional hardware required.
- Body: Durable, die cast aluminum alloy for optimal heat dissipation
- White, Nickel or Black for choice--Scratch resistant and smooth finish
- The LED fixture is Triac dimming
- Featuring tunable White Color Temperature: 2700K,3000K,3500K,4000K and 5000K
- WARRANTY--5-year limited warranty



APPLICATION

· Commercial; Residential; hospitality

SPECIFICATIONS


Model No.	RY-USDL-R4-9W-5CCT	RY-USDL-R6-12W-5CCT
Size:	4" Round	6" Round
Power:	9W	12W
Input Voltage:	AC120V	
Dimming	Triac Dimmable	
Lumens	700 LM	1000 LM
Protection Rating	Ip20 (For Indoor Use Only)	
Power Factor:	>0.7	
Beam Angle	110°	
CCT:	5CCT (2700K/3000K/3500K/4000K/5000K)	
Ra:	>80	
Working Life:	Lumen Maintenance over 70% @ 50,000+ Hours	
Oper. Temperature	-13°F ~+113°F / -25°C ~+45°C	
Certification	ETL/ ENERGY STAR	






PRODUCT DIMENSIONS


4" SLIM DOWNLIGHT

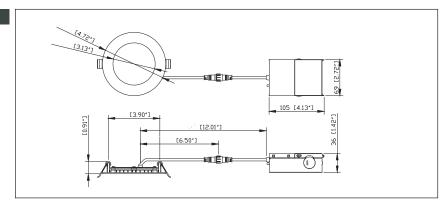


6" SLIM DOWNLIGHT

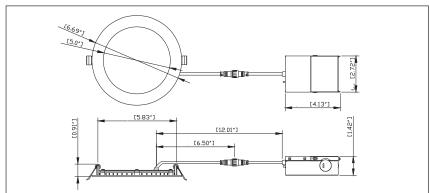

PHOTOMETRIC REPORT

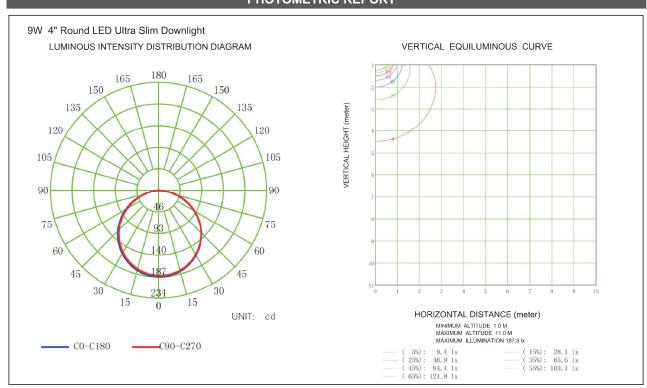



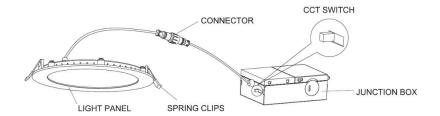

- 1. Determine the location for installation and cut ceiling hole in accordance with cut-hole dimensions. Refer to Hole Diameter table for appropriate sizes. (Fig. 1)
- 2. On the side of the junction box, select the light color temperature: $2700\mbox{K-}3500\mbox{K-}4000\mbox{K-}5000\mbox{K}$.(fig.2)
- 3. Remove the appropriate knockout(s) on the side panel (Fig. 2).
- 4. Insert the electrical supply cable through the knockout and secure with a cable connector (sold separately).
- 5. Using quick-connect push-in terminals, connect the ground wire to the green wire terminal; black wire to black wire terminal; white wire to white wire terminal. (Fig. 2)
- 6. Place all wiring and connections back in to the box and close the cover. Connect the driver to the light panel.
- 7. Insert junction box through the mounting hole. (Fig. 3)
- 8. Push spring-loaded clips on the fixture upwards and insert fixture base in to the mounting hole. Release the clips and fixture will be pulled flush to the ceiling. (Fig. 4)

